

# INSTRUCTIONS

**CAUTION:** Do not keep the keys in the safe.

## 1. OPENING THE SAFE WITH OVERRIDE KEY

For your convenience, we have engineered a manual override system for your safe. To open the door of the safe for the first time, just remove the battery cover plate (d) (see diagram 1). You will find the keyhole, insert the key into the keyhole and turn it in a counter-clockwise direction, turn the knob (a) in a clockwise direction. This will manually open your safe.

## 2. INSTALLING THE BATTERIES

 
The safe requires 4×size 'AA' (1.5V R06) batteries.

To install the batteries, just remove the battery cover plate (d) (see diagram 1) and install the four batteries. Ensure the + and - positions are correct. The display (e) will scan the status of the electronic lock system automatically. If it is in order, the display will show 'good'.

## 3. OPENING THE SAFE AFTER INSTALLING THE BATTERIES


To open the door of the safe, press the button 'START' (c) (see diagram 1), the display on the panel will show '-----', then input one of the two sets of factory-preset codes: 0,0,0,0 (user code) or 8,8,8,8 (master code) immediately and confirm by pressing the button 'START'. The green light (f) will be on with the display showing 'OPEN' and open the door using the knob (a) within 4 seconds.

If you do not want the display to show your codes when you open the safe, just press the button 'START' twice at the first time of pressing and other steps are the same.

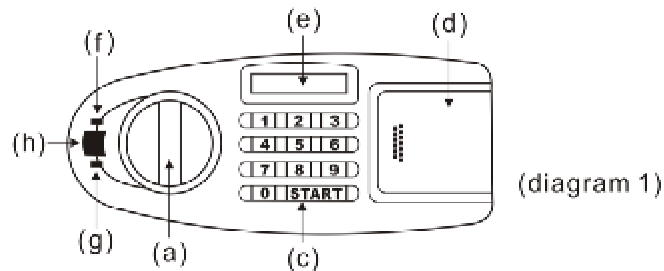

## 4. PROGRAMMING THE CODE

 **NOTICE:** The safe can be programmed with two sets of codes. For your safety, after opening the safe and installing the batteries, you should programme two sets of your new codes to take the place of two sets of factory-preset codes.

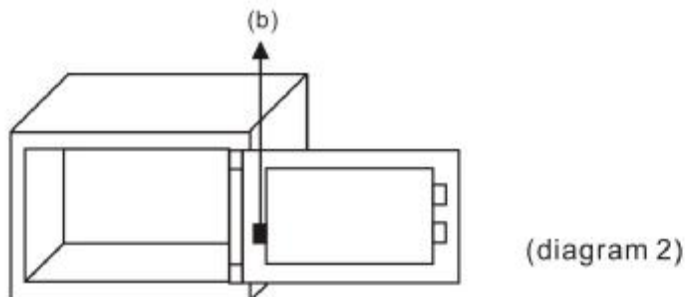

### Programming the user code

- A. Press the red button (b) (see diagram 2), then release it and the display on the panel will show 'SET CodE'.
- B. Now press from 3 to 8 numbers that you wish to use as a new user code, and confirm by pressing the button 'START'. The display will show 'IN' and your inputting numbers. It means that the new user code is confirmed.

### Programming the master code

- A. Press the red button, then release it and press the button 'START'. The display will show 'oLd CodE'.
- B. Now input the original master code (factory-preset code: 8,8,8,8) and press the button 'START'. The display will show 'SET'. Now press from 3 to 8 numbers that you wish to use as a new master code, and confirm by pressing the button 'START'. Now the display will show 'rE-INPUT'.
- C. Now enter your inputting numbers again and confirm by pressing the button 'START'. The display will show 'IN' and your inputting numbers. It means that the new master code is confirmed.

If you or an intruder uses the incorrect group of numbers, the red light (g) will be on and the display will show 'Error' and it will not open.

If the incorrect combination code is used 4 times consecutively, the display will show 'Error' and the buzzer (h) will sound for approximately 3 minutes. The correct code cannot be entered until after this 3 minutes delay. The override key can however be used to open the door during this three minutes. If the key is used to open the door, the buzzer can be cleared by pressing the red button.

## 5. BATTERY REPLACEMENT WARNING

To test the batteries, just press the button 'START'. If the batteries are low, the display will show 'Lo-BAE', and you should replace the batteries.

## 6. REPLACING THE BATTERIES

The safe requires 4×size 'AA' (1.5V R06) batteries.

Replace the old batteries, then the display will scan the status of the electronic lock system automatically. If it is in order, the display will show 'good'.

Use of alkaline batteries is recommended.

 
## 7. OVERRIDE INSTRUCTION TO OPEN THE SAFE

For your convenience, we have engineered a manual override system for your safe. If you forget or misplace your combination, remove the battery cover plate and take out the batteries. Then remove the sticker inside the battery compartment, and you will find the keyhole, insert the key into the keyhole and turn it in a counter-clockwise direction, turn the knob in a clockwise direction. This will manually open your safe at any time.

## 8. INSTALLING THE SAFE

To reduce the risk of theft of the safe, it can be secured to floor, wall or in a cupboard. For your convenience, there are four holes (diameter 8mm) both in the bottom and on the back, therefore it can be fixed by the expansion bolts supplied. (see diagram 3)

**CAUTION:** The safe is heavy and should be placed on a solid and secure surface. The safe should be affixed as shown in diagram 3.

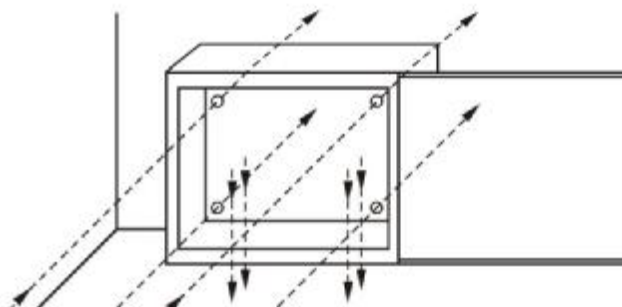

(diagram 3)